

(Note: This article was exported as PDF from our Support Wiki. We apologize for any imperfect formatting.)

# Asentria Technical Notes

## Default IP Addresses

(Created: 3 Dec 2024)

As of software version 2.12.550 STD, the default IP addresses assigned to the SiteBoss are:

Eth1: 192.168.100.100  
 Eth2: 192.168.200.100  
 Eth expansion: 192.168.1.199

Adjusting a laptop or desktop to a network configuration to access the units using one of these IP addresses allows for quick access. Just navigate using an internet browser to the IP address for the port your computer is plugged into.

» **Note:** The SiteBoss does not heed changes to network configurations while you are connected to a command processor. Changes, including population of the candidate default router set, are pended until all network-based command processor sessions have ended. Open FTP connections will fail if these settings are changed during an open connection. A Web Interface connection will fail if the Ethernet IP address is changed as soon the submit button is pressed.

## History Table

Date	Document Change
3 Dec 2024	Documents created